




Roof drains – double-check the height of the main and overflow drains. We do not want the drains set too low; otherwise, they will hold water and dirt, discolor the membrane, standing water, mosquitoes, and potentially cause premature damage to the membrane over time.

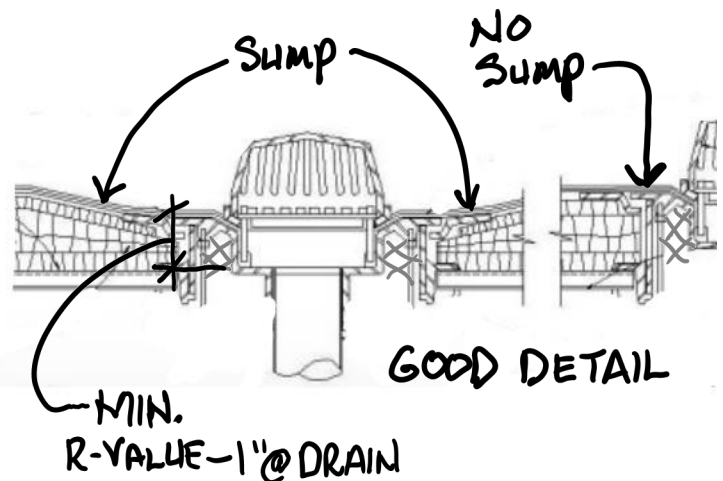

**The overflow drain should not be in a sump or in the same sump as the main drain.**



**Locations of drains will be discussed at the roof pre-installation meeting based on the roof insulation drawings.**

Please talk to your roofer and make sure that they alert you if the drains are too low or incorrectly located.

