


## **Contract Contract Co**



Protect absorptive materials that are stored on-site and during installation from contamination and moisture damage.

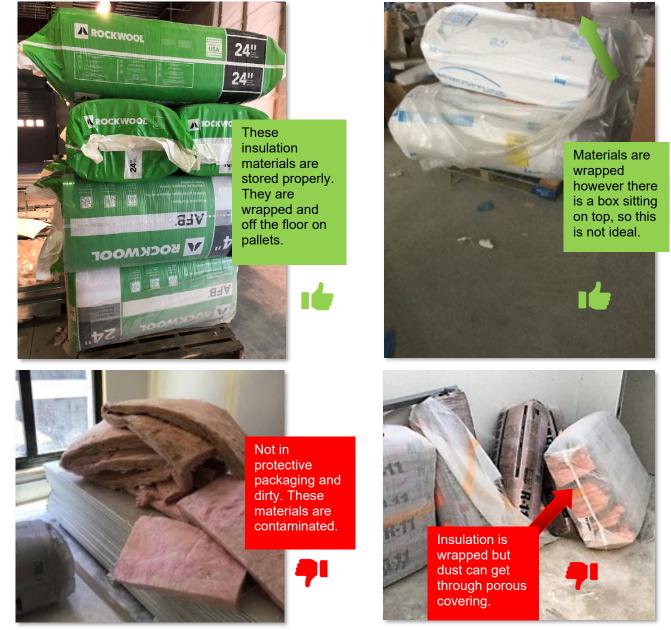

Absorptive building materials such as porous insulation, wood, gypsum wallboard, should be kept dry to prevent the growth of mold and bacteria. Cover these materials to prevent water damage, contamination from dirt/debris, and store raised from the ground. Do not stack other materials on top. During installation, minimize the time material is in contact with floor or other porous materials. Immediately remove materials that show signs of mold and mildew or moisture stains.

BREAKING GROUND >>> Building Quality At Every Level