


In general, rebars are required to be located with-in the center of the CMU cell, as detailed by the Engineer.

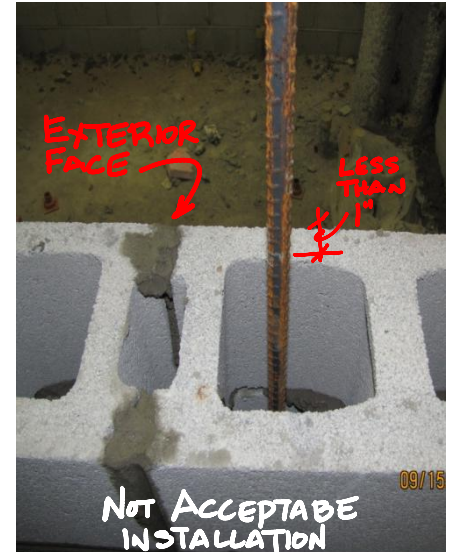

When THE CMU is exposed to the weather, the edge of the rebar must be no closer than 2" (for a #6 or greater) or 1 ½" (for a #5 or less) from the face of the exterior portion of the CMU.

For non-weather installations, the bar must be 1 ½" from the face of the CMU.

Also, the bar is required to be at least ¼" from any CMU surface when using FINE GROUT or ½" from any CMU surface when using COURSE GROUT, in order to allow the grout to flow around the bar(s).