


Most membrane flashing is designed to be installed between ½” to 1” from the front face of the masonry:

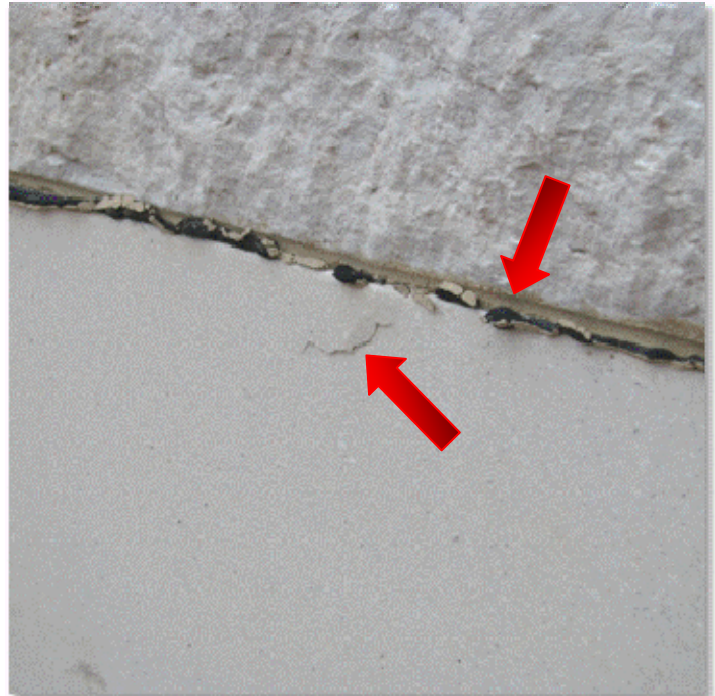

The membrane needs to be protected from UV rays & due to the sun and heat, the membrane will flow to the front face and potentially damage the masonry & mortar...and be unsightly.