



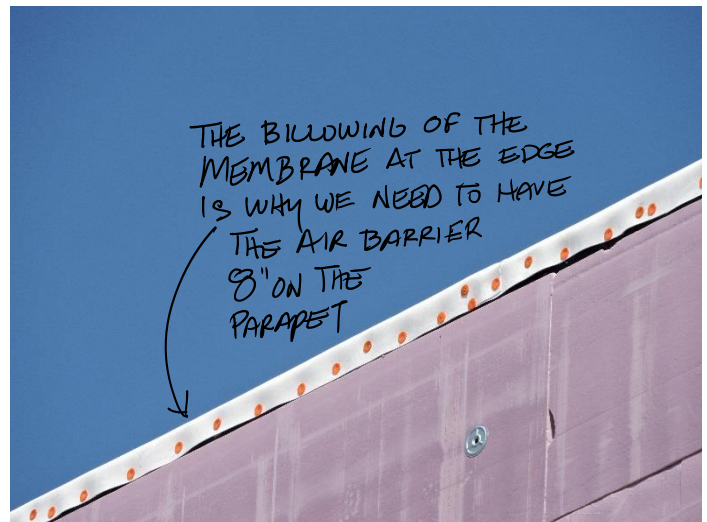

Air Barriers are about continuity and compatibility...both need to be reviewed carefully prior to installation and verified during construction.

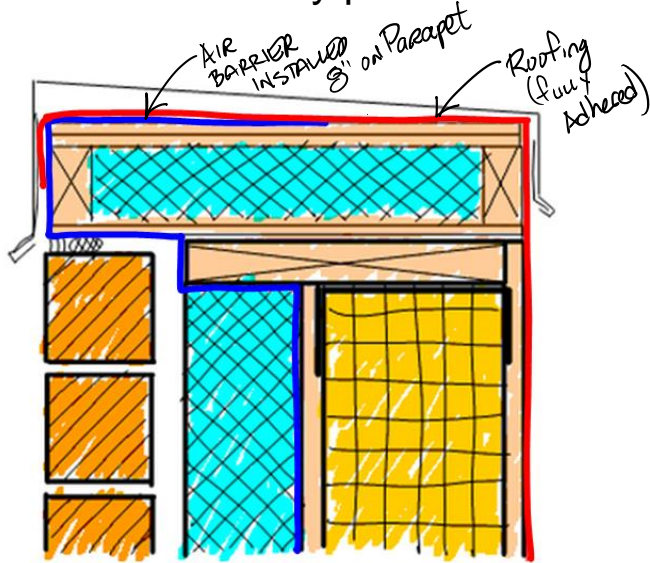

The peel and stick joints (typically rubberized asphalt) is not compatible with roof membranes.

When the roofing system goes over the parapet, we need to confirm that we install the Air Barrier membrane with a compatible sealant at the peel and stick joints in order to separate the roofing material and the Air Barrier joints.

Some compatible sealant that could be used at the joints are
(Always verify compatibility with both manufacturers prior to installation):
Dow 758, Dow 795, Tremco Dymonic 100, Grace S100, Tremco Spectrem 1

