




When installing sealant over a sheathing joints or peel and stick joints, the sealant should be **1/8" thick x 1" wide (minimum)**.

Make sure we do not remove sealant when we install sealant perpendicular.

Do not create a ledge.

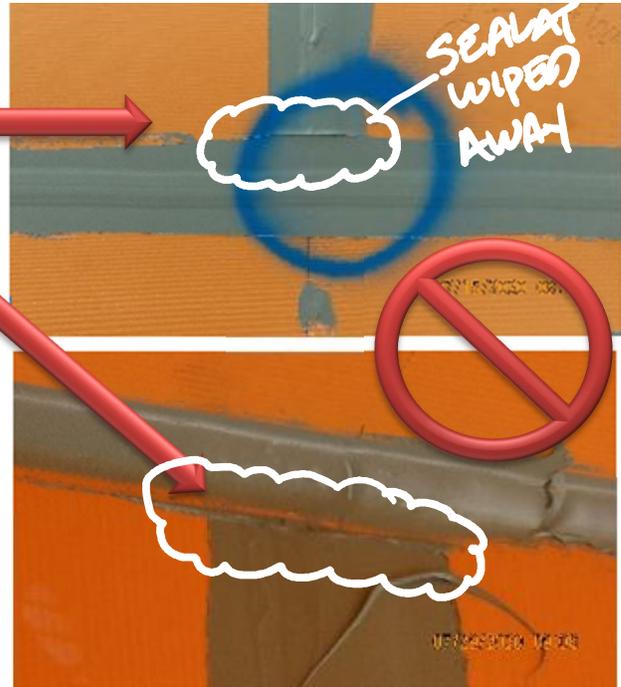

Never just install sealant over a fish mouth...always slice the joint and properly roll and seal.

