





Communication is key to any relationship, including between the General Contractor, Air Barrier Contractor, and Veneer Contractor.



Make sure that AVB is properly cured prior to the installation of the masonry flashing.

Verify how many days/hours are required

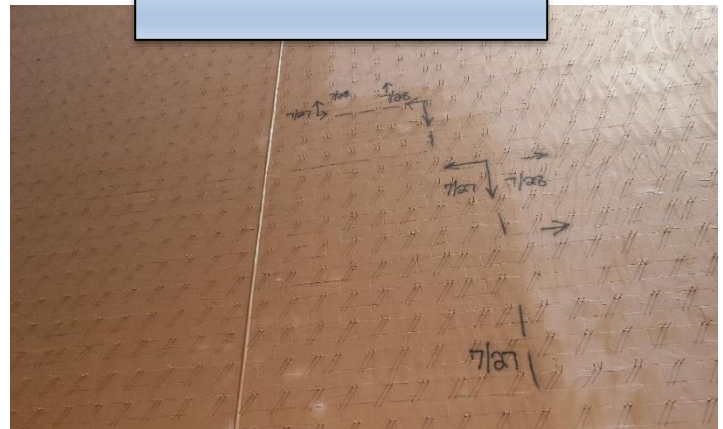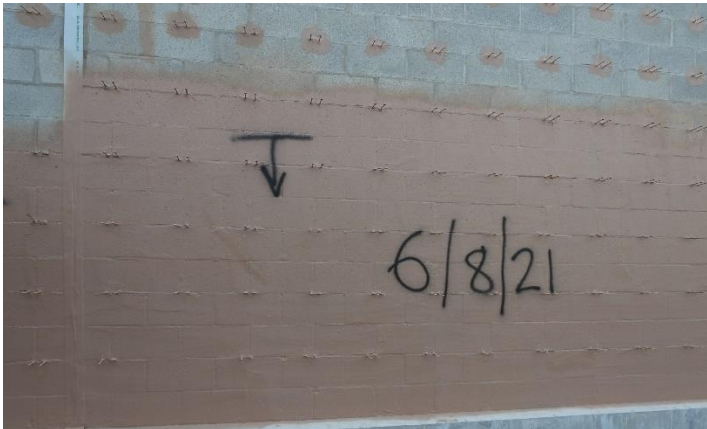

Properly coordinating the timing of materials is critical. Underlying materials must be given proper time to cure or dry before being covered.

Ask the question and discuss the timing required with the team.

Dating the material with a compatible paint is a good way to communicate the date installed so that the next trade will ask the question or be reminded about the discussion at the pre-installation meeting to wait the required amount of time needed...and prevent failure.

