


Installing bond breaker tape in a joint avoid 3-sided adhesion:



Photo above is a joint that sealant has been installed on top of a raked out mortar joint.

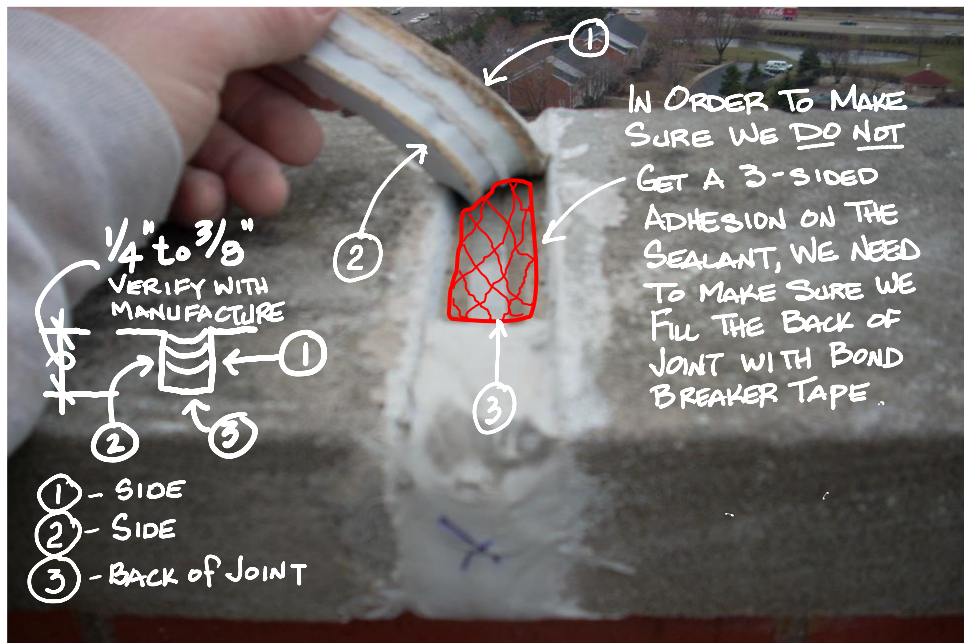

The bond breaker must go on the entire bottom surface only. Make sure the correct size is ordered & on site for the width!
OR – Grind the joint deeper and install backer rod!